


AstroPure™

Portable Air Purification Systems

AstroPure@aafintl.com

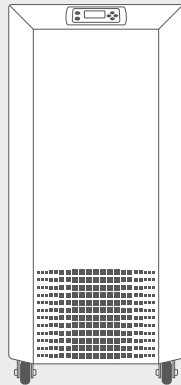

AAF | Flanders®

Bringing clean air to life.®

9920 Corporate Campus Drive, Suite 2200, Louisville, KY 40223-5690
888.223.2003 Fax 888.223.6500 | aafintl.com


AAF | Flanders®

Bringing clean air to life.®

AstroPure™

Portable Air Purification Systems

Quick Start Guide

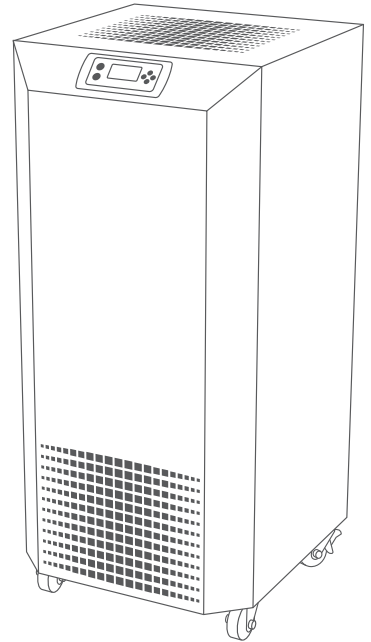

Important notes:

- Prior to operating this AstroPure air purification system, please read and observe all safety and installation instructions provided in the Introduction and Installation Instructions section of the **Installation, Operation, and Maintenance (IOM)** manual that came enclosed with the system.
- This guide is meant to expedite setup and operation of the system following installation and using the default settings.
- For more detailed information on setting up, operating, and maintaining this system, please consult the **IOM** manual or contact AstroPure@aafintl.com.

- 1 After completion of installation, turn on the power switch located on the back of the unit.
 - a. The unit is preset to 60% of maximum power.
 - b. To make adjustments to the CFM settings, refer to the EC Motor Speed Adjustment section of the **IOM** manual.
- 2 When the power cord is plugged into a wall receptacle, and the power switch is in the ON position, the control panel (HMI) will sound an audible confirmation and illuminate.
- 3 The system starts with the fan in the OFF position. To turn it on, press the red power button that is part of the control panel (HMI) on the top of the unit.
 - a. The EC motor may require time to ramp up to full operating speed (RPM).
 - b. If the motor does not seem to be running upon turning on the unit, allow ten (10) seconds for the motor to get up to full operating RPM. If nothing happens, go to the troubleshooting section in the **IOM** manual.